VciMultiDma

1) Functional Description

As the VciDma component, this component moves data from a source memory buffer to a destination memory buffer. It is both a target and an initiator.

- It is addressed as a target to be configured for a transfer.
- It is acting as an initiator to do the transfer.

The VciMultiDma component supports up to 8 simultaneous DMA transfers, corresponding to 8 independant DMA channels. As there is only one VCI initiator port, the general arbitration policy between the active channels is round-robin.

The number of channels and the max burst length are constructor parameters. The burst length parameter must be multiple of 4 bytes.

This component makes the assumption that the VCI RDATA & WDATA fiels have 32 bits. The source buffer base address, the destination buffer base address and the buffer length mus be multiple of 4 bytes. The buffer length is not constrained to be a multiple of the burst length.

Each channel has its own set of memory mapped registers, and for each channel a specific IRQ can be optionally asserted when transfer is completed.

Each channel k has 5 memory-mapped registers :

• DMA_SRC[k] (Read / Write)

It defines the physical address of the source buffer.

• DMA_DST[k] (Read / Write)

It defines the physical address of the destination buffer.

• DMA_LEN[k] (Read / Write)

A write access defines the length of the transfer (in bytes), and starts the transfer. A read access returns the DMA channel status. The relevant values for the status are:

Cnannel Status Value
DMA_IDLE 0
DMA_SUCCESS 1
DMA_READ_ERROR 2
DMA_WRITE_ERROR 3
DMA_BUSY >3

• DMA RESET[k] (Write-only)

VciMultiDma 1

Writing any value into this pseudo-register makes a clean re-initialisation of the DMA coprocessor: The on-going VCI transaction is completed before the coprocessor returns the IDLE state. This write access must be used by the software ISR to aknowledge the DMA IRQ.

• DMA_IRQ_DISABLED[k] (Read / Write)

A non zero value disables the IRQ line. The RESET value is zero.

The aligned segment size associated to this VCI target is 256 bytes, as only 8 address bits are decoded: the 5 LSB bits define the target register, and the 3 MSB bits define the channel index.

For extensibility issues, you should access the DMA using globally-defined offsets, and you should include file soclib/dma.h in your software, it defines DMA_SRC, DMA_DST, DMA_LEN, DMA_RESET, DMA_IRQ_DISABLED.

This hardware component checks for segmentation violation, and can be used as a default target.

2) Component definition & usage

source:trunk/soclib/soclib/module/infrastructure component/dma infrastructure/vci multi dma/caba/metadata/vci multi dm

See SoclibCc/VciParameters

```
Uses( 'vci_multi_dma' )
```

3) CABA Implementation

CABA sources

• interface:

source:trunk/soclib/soclib/module/infrastructure component/dma infrastructure/vci multi dma/caba/source/include/

ullet implementation :

source:trunk/soclib/soclib/module/infrastructure component/dma infrastructure/vci multi dma/caba/source/src/vci

CABA Constructor parameters

CABA Ports

• p_resetn : Global system reset

• p_clk : Global system clock

• p_vci_target : The VCI target port

• p_vci_initiator : The VCI initiator port

• p_irq[k] : As many output IRQ ports as the number of channels

4) TLM-DT implementation

The TLM-DT implementation is not available yet.